

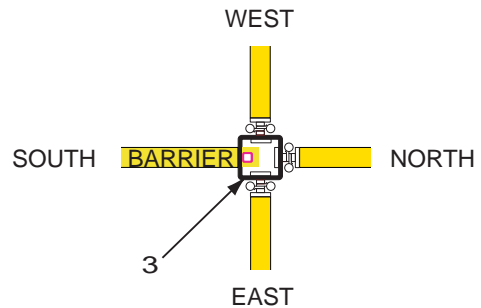


## Swing Gate Dimensions

No	Part Code	Description
1		Hinge section metal parts
2		Gate section
3		Barrier post (not supplied with gate)
4		Central gate support
5		End gate support with nylon wheel
6		Next barrier section end post

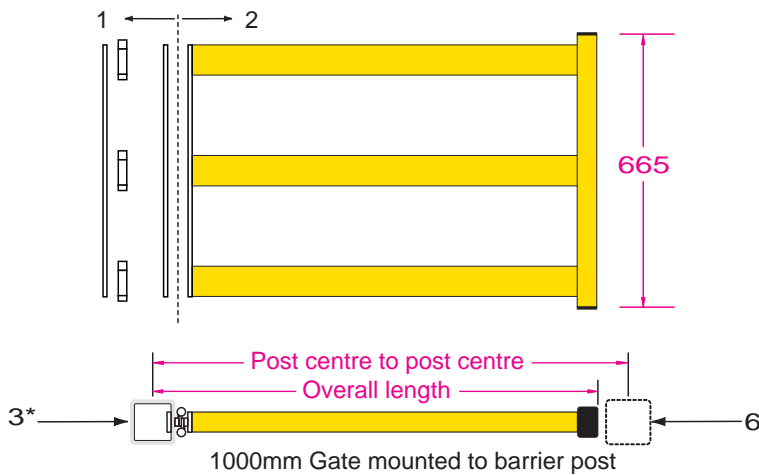

Gate mounting position orientation convention. Where the gate is mounted to a 90° corner post the barrier entry/exit is always South/East. Gate orientation can ONLY be North or West.

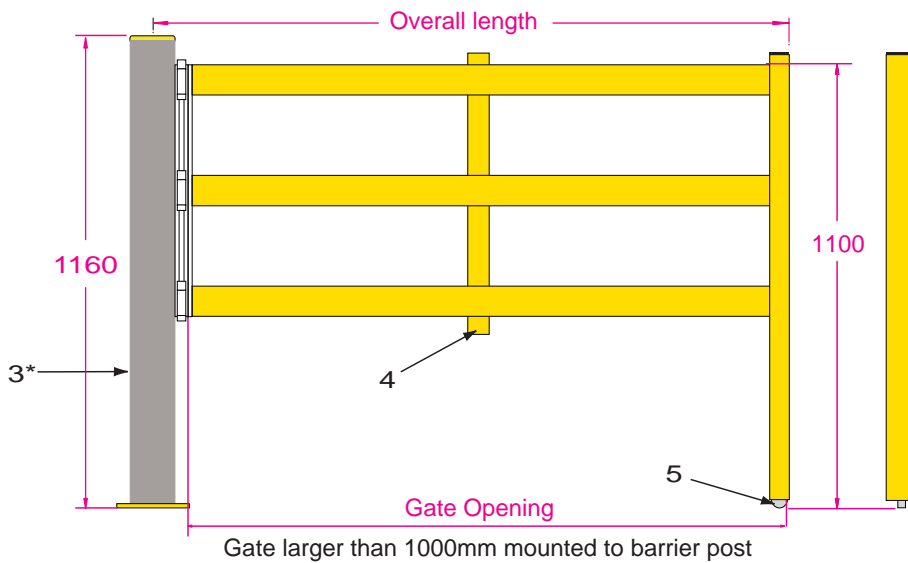

All dimensions shown in mm

\*Barrier post not supplied as part of the gate

Part Code	Opening	Dimensions		Supports Fitted	
		Overall		Central	End
		Post centre to gate end	Post centre to post centre		
010_0001	1000mm	1105mm	1180mm	No	No
010_0002	1500mm	1605mm	1680mm	Yes	Yes
010_0003	2000mm	2105mm	2120mm	Yes	Yes
010_0004	1000-2000mm	Opening + 105mm	Opening + 180mm	Yes	Yes